

April 2022

Spence™ FTE Series Float and Thermostatic Steam Trap

Introduction

This installation sheet covers the installation and maintenance of FTE Series Float and Thermostatic Steam Trap.

Product Description

The FTE Series ball float traps are fitted with an integral balanced pressure type thermostatic air vent.

The FTE Series is available with horizontal in line connections. However, in case of FTE-14 sizes NPS 1/2 and 3/4 / DN 15 and 20, the position of body can be changed to suit different flow directions like left to right, top to bottom or right to left. A steam lock release (SLR) option is available to FTE Series Traps.

Specifications

Available Configurations

See Table 1

End Connection Styles

NPT, CL125, CL150, CL300, CL600,
DIN 10, 16, 25 or 40 and BS10 - F, H, J, K or R

Maximum Operating Pressure⁽¹⁾

See Table 2

Maximum Operating Temperature⁽¹⁾

Saturated at pressure

Maximum Allowable Pressure⁽¹⁾

Cast iron and Ductile iron: 232 psig / 16 bar

Cast steel: 465 psig / 32 bar

Maximum Allowable Temperature⁽¹⁾

Cast iron and Ductile iron: 450°F / 232°C

Cast steel: 850°F / 454°C

Materials of Construction

Body and Cover: Cast iron, Ductile iron and Cast steel

Valve, Valve Seat, Float, Lever Assembly, Thermostatic Airvent and Housing:

Stainless steel

Cover Bolts: Carbon steel

Installation



WARNING

Personal injury, property damage, equipment damage or leakage due to escaping steam or bursting of pressure containing parts may result if this equipment is over pressured or is installed where service conditions could exceed the limits given in the specifications or where conditions exceed any ratings of the adjacent piping or piping connections. To avoid such injury or damage, provide pressure-relieving or pressure-limiting devices (as required by the appropriate code, regulation, or standard) to prevent service conditions from exceeding those limits.

The maximum differential pressure (ΔP) stamped on product name plate must be greater than the maximum pressure differential across the trap.

1. The pressure/temperature limits in this Installation Sheet and any applicable standard or code limitation should not be exceeded.

FTE Series

Table 1. FTE Series Available Configurations

BODY MATERIAL	TYPE ⁽¹⁾	OPERATING PRESSURE	END CONNECTION
Cast iron	FTE-10	To 200 psig / 14.0 bar	Threaded
	FTE-43	To 200 psig / 14.0 bar	Flanged
Ductile iron	FTE-14	To 200 psig / 14.0 bar	Threaded
	FTE-43	To 200 psig / 14.0 bar	Flanged
Cast steel	FTE-44	To 465 psig / 32 bar	Threaded or Socket Weld
	FTE-44F	To 465 psig / 32 bar	Flanged

1. Add "S" to end of Type for SLR.

Table 2. FTE Series Maximum Operating Pressure

TYPE	INLET SIZE		MAXIMUM OPERATING PRESSURE, psig / bar									
			65 / 4.5		145 / 10		200 / 14		300 / 21		465 / 32	
	NPS	DN	In.	mm	In.	mm	In.	mm	In.	mm	In.	mm
FTE-10 and FTE-43	1/2 and 3/4	15 and 20	0.141	3.57	0.094	2.38	0.079	2	----	----	----	----
	1	25	0.256	6.5	0.197	5	0.157	4	----	----	----	----
	1-1/2	40	0.689	17.5	0.65	16.5	0.531	13.5	----	----	----	----
	2	50	1.063	27	0.811	20.6	0.657	16.7	----	----	----	----
FTE-14	1/2 and 3/4	15 and 20	0.141	3.57	0.094	2.38	0.079	2	----	----	----	----
	1	25	0.185	4.7	0.126	3.2	0.106	2.7	----	----	----	----
FTE-44 and FTE-44F	1/2 and 3/4	15 and 20	0.16	4.07	0.107	2.73	0.091	2.3	0.075	1.9	0.059	1.5
	1	25	0.256	6.5	0.197	5	0.157	4	0.13	3.3	0.118	3
	1-1/2	40	0.689	17.5	0.65	16.5	0.531	13.5	0.531	13.5	0.531	13.5
	2	50	1.063	27	0.811	20.6	0.657	16.7	0.657	16.7	0.657	16.7

1. Install trap in an accessible position and location for easy servicing.
2. Ensure that the float direction of the trap is positioned downward during installation. Install trap straight, plumb and in a level position to ensure proper orientation.
3. Install below and close to equipment being drained. Avoid long lengths of horizontal piping ahead of trap.
4. Pitch all horizontal inlet lines towards the stream trap to help eliminate potential water hammer problems.
5. Provide a dirt pocket and strainer (with blow down) ahead of trap.
6. Install union fittings and shut off valves on both sides of trap for ease of servicing and trap testing.
7. Install a test valve in outlet pipe and cap it. This allows trap to be tested. Cap is used as safety precaution when unit is not being tested.
8. Blowdown piping using full steam pressure for (5) five minutes prior to service. This cleaning process removes debris from piping.
9. Perform maintenance and cleaning 2 to 3 days after startup until system is clean. Then perform maintenance 6 to 12 months once in normal operation.

Note

Arrow cast on the trap indicates the flow direction while the arrow on the nameplate indicates the float direction while closing the trap. See Figure 2.

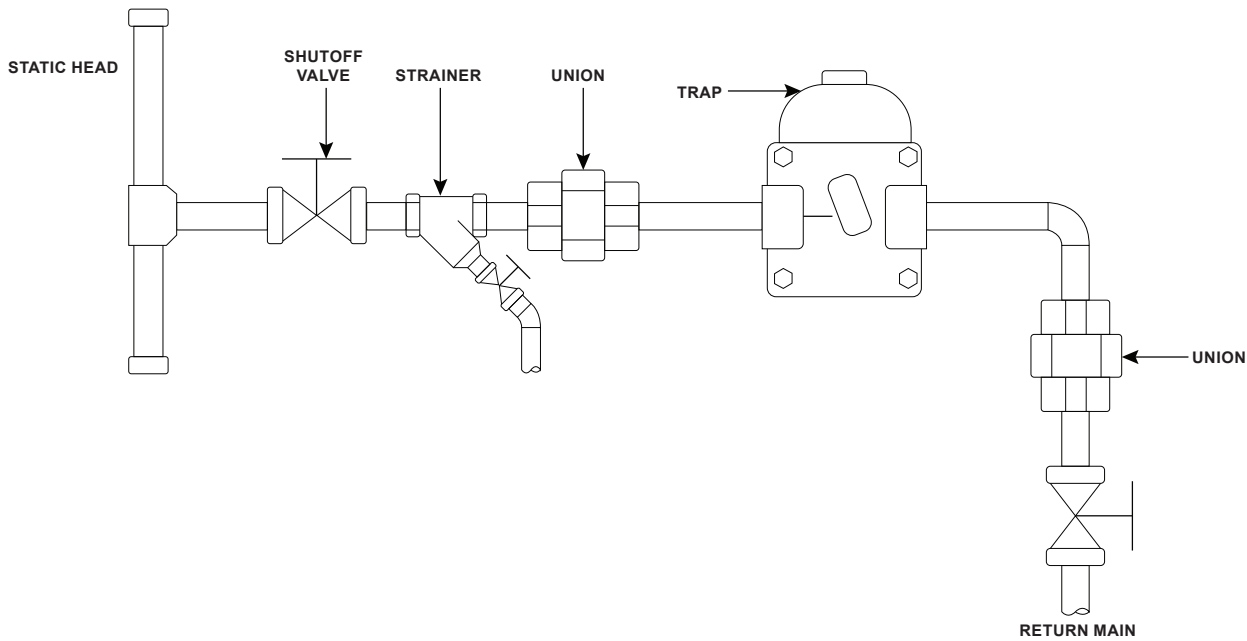


Figure 1. FTE Series Installation Schematic

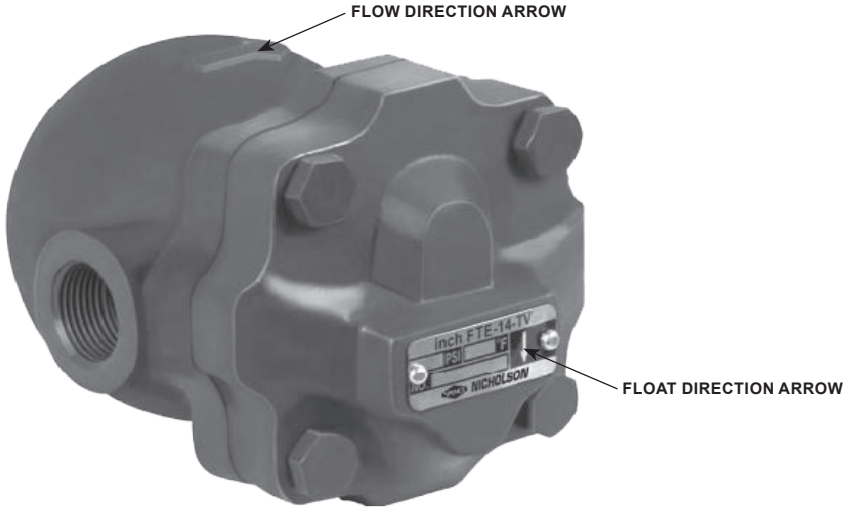


Figure 2. FTE Series with Flow Direction Arrow and Float Direction Arrow

Maintenance



WARNING

To avoid personal injury, property damage or equipment damage caused by sudden release of pressure or explosion of accumulated gas, do not attempt any maintenance or disassembly without first isolating the equipment from system pressure and relieving all internal pressure from the equipment.

While working on steam traps consider the risk of getting burned, Therefore remember the following:

- The piping parts before and after the steam trap must be atmospheric. Therefore, switch off the steam installation and / or close the necessary valves.
- Secure the necessary valves and / or switches so that the piping parts stay atmospheric during work.
- When unscrewing pressurized piping parts hot condensate in the steam trap and steam installation can spontaneously start to boil and be given off as steam. In general the steam trap must be "cold".
- When checked regularly and properly maintained, FTE Series Float and Thermostatic Traps provides optimum performance and long life.
- The internals of FTE Series can be replaced leaving the trap in place.
- Inspect the trap mechanism periodically and remove all dirt from working parts.
- Replace worn parts.
- The safety measures for replacing a steam trap also apply for opening the cover or body of the steam trap. Always renew the gasket after opening the steam trap.

 [SpenceValve.com](https://www.SpenceValve.com)

Emerson

Americas

McKinney, Texas 75069 USA
T +1 800 558 5853
+1 972 548 3574

Europe

Bologna 40013, Italy
T +39 051 419 0611

Asia Pacific

Singapore 128461, Singapore
T +65 6777 8211

Middle East and Africa

Dubai, United Arab Emirates
T +971 4 811 8100

VCIMD-15083-EN © 2020, 2026 Emerson Electric Co. All rights reserved 03/26. Spence is a mark owned by a subsidiary of Emerson Electric Co. The Emerson logo is a trademark and service mark of Emerson Electric Co. All other marks are property of their respective owners.

Neither Emerson nor any of its affiliated entities assume responsibility for the selection, use or maintenance of any product. Responsibility for proper selection, use, and maintenance of any product remains solely with the purchaser and end user.

The contents of this publication are presented for informational purposes only, and while every effort has been made to ensure their accuracy, they are not to be construed as warranties or guarantees, express or implied, regarding the products or services described herein or their use or applicability. All sales are governed by our terms and conditions, which are available upon request. We reserve the right to modify or improve the designs or specifications of such products at any time without notice.